

Phase Noise and Jitter

Rick Poore
Agilent EEsof EDA

Phase noise and jitter are two related quantities associated with a noisy oscillator. Phase noise is a frequency-domain view of the noise spectrum around the oscillator signal, while jitter is a time-domain measure of the timing accuracy of the oscillator period. This paper discusses the relationship between phase noise and jitter in free-running oscillators. The reader is referred to three other papers for a more detailed look at the theory: Demir [1], Hajimiri [2] and Herzel [3]. The phase noise and jitter theory discussed here is mainly taken from these three papers. The jitter in a closed-loop phase-locked loop is not discussed here; see [4, 9, 10].

1 Phase Noise as a Lorentzian Spectrum

We usually observe the asymptotic behavior of phase noise \mathcal{L} measured at an offset frequency f from the carrier and assert that:

$$\mathcal{L}(f) = \frac{a}{f^2} = \frac{1}{\pi} \frac{\pi f_{osc}^2 c}{f^2} \quad (1)$$

where a is some constant. But this implies that phase noise goes to infinity at $f=0$. This is obviously wrong, as it implies that there is infinite noise power at $f=0$. For very noisy oscillators, it could also suggest that $\mathcal{L} > 0$ dBc/Hz at small enough offsets. But phase noise has been shown to have a Lorentzian spectrum:

$$\mathcal{L}(f) = \frac{1}{\pi} \frac{\pi f_{osc}^2 c}{(\pi f_{osc}^2 c)^2 + f^2} \quad (2)$$


where c is a scalar constant that describes the phase noise of the oscillator (in the absence of $1/f$ noise and ignoring any noise floor). This choice of expressing the characteristic constant as $\pi f_{osc}^2 c$ will become clear when the constant c is reused in the equations for jitter.

The Lorentzian spectrum nicely avoids any singularities at $f=0$ while maintaining the same asymptotic behavior. It also has the property that the total power in \mathcal{L} from minus infinity to plus infinity is 1. This means that phase noise doesn't change the total power of the oscillator, it merely broadens its spectral peak. If we borrow some terminology from laser technology (lasers are just optical oscillators), we can talk about the spectral line width of an oscillator (also half power width, full width at half maximum, or -3 dB width):


$$f_{FWHM} = 2f_{HW} = 2\pi f_{osc}^2 c \quad (3)$$

For quiet oscillators, the phase noise at offset frequencies greater than 1 Hz will always be less

than 0 dBc/Hz, avoiding the embarrassing question of what a phase noise greater than 0 dBc/Hz means. At some very small frequency less than 1 Hz, the phase noise will be greater than 0 dBc/Hz, but only within a bandwidth of a fraction of a Hertz. This is what we should expect, to see something representing the carrier signal itself at $f=0$, which in the absence of noise would have a spectrum of $\delta(f)$. The plot to the right shows the phase noise for $\pi f_{osc}^2 c = \pi \times 10^{-3}$. We do see phase noise greater than 0 dBc/Hz, but only at an offset frequency less than 0.03 Hz. The total power integrated over a 1 Hz bandwidth still unity.

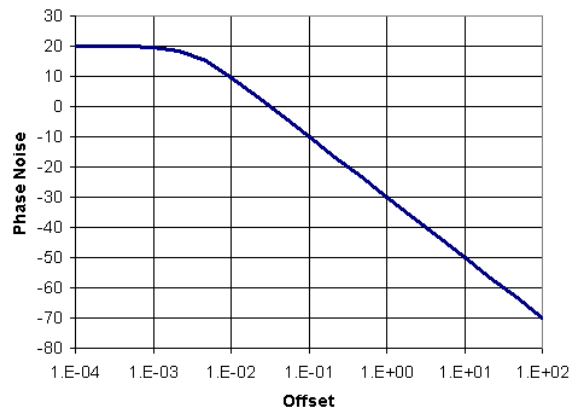

For noisy oscillators, the phase noise will again always be less than 0 dBc/Hz, but this gives us a spectral line width that is greater than 1 Hz. The phase noise goes flat below f_{HW} , showing the wide spectral line width of the oscillator due to high phase noise. (*Note: this does not equate to the problem we have observed in the ADS phase noise simulation where the pnm phase noise goes flat below some small offset frequency.*) The plot to the right shows the phase noise for $\pi f_{osc}^2 c = \pi \times 10^{-3}$. Note if we were to extrapolate from the phase noise at 100 kHz, we would get a phase noise of +30 dBc/Hz at an offset frequency of 1 Hz. But this doesn't make sense that the noise is stronger than the carrier. Instead the carrier is broadened over a 6.3 kHz (two-sided) bandwidth.

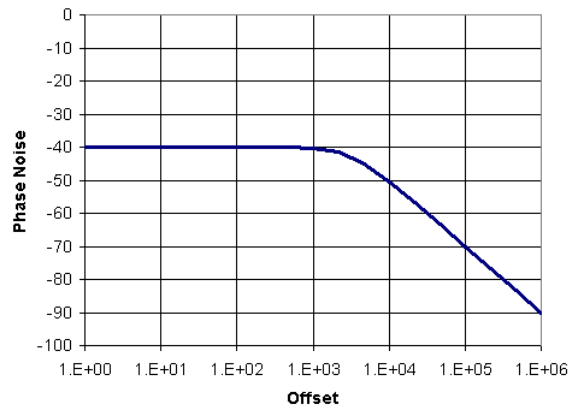

2 Jitter

We intuitively know that jitter is a variation in the zero-crossing times of a signal, or a variation in the period of the signal. But a variation with respect to what? There are several different types of jitter than can be defined [1,3]; they will subscripted them to distinguish between them.

Jitter is a statistical measure of a noisy oscillation process. The period of each cycle of the oscillator is different, due to the noise-induced jitter. We will refer to τ_n as the period of cycle n . For a free-running oscillator with noise, the oscillation period will have a Gaussian distribution. This distribution has a mean τ_{avg} , whose inverse can be defined as the average frequency of oscillation $f_{osc} = 1/\tau_{avg}$. The distribution also has a standard deviation, which we will later define as the cycle-to-cycle jitter σ_c . Jitter is defined as an rms quantity.

2.1 Absolute Jitter

The first type of jitter is absolute, or long term, jitter, $\sigma_{abs}(t)$. This type of jitter has an interesting property in that it is a function of time. It is given by the sum of each periods variation from the average:

$$\sigma_{abs}(t = N\tau_{avg}) = \sum_{n=1}^N \tau_n - \tau_{avg} \quad (4)$$

This value varies with the observation time, and the variance of this measure diverges as t goes to infinity. This is not a very useful measure for free-running oscillators as it does increase with time. This measure is more often used with PLLs, because a PLL has a phase reference source that resets the jitter, which a free-running oscillator does not have.

Another way of expressing the dependence on this form of jitter on the measurement time is to express it as [1]:

$$\sigma_{abs}^2(t) = ct \quad (5)$$

where c is the same oscillator noise constant used in the phase noise formulations (2) and (3). This jitter accumulates over time in a free-running oscillator because “any uncertainty in an earlier transition affects all the following transitions, and its effect persists indefinitely” [2]. The sources of jitter are normally assumed to be uncorrelated, both between devices and between successive observations of each oscillator period. The variances (σ^2) add for uncorrelated random variables.

2.2 Cycle-to-Cycle Jitter

This is the jitter definition that most people mean when they talk about jitter as a single number. Herzel calls it cycle jitter; Demir and Hajimiri call it cycle-to-cycle jitter. Other authors simply call it rms cycle jitter or the jitter in one clock cycle. The cycle jitter measures the variance of each period to the average period:

$$\sigma_c^2 = \lim_{N \rightarrow \infty} \left(\frac{1}{N} \sum_{n=1}^N (\tau_n - \tau_{avg})^2 \right) \quad (6)$$

This too can be defined in terms of the oscillator noise constant c as well as in terms of the absolute jitter:

$$\sigma_c^2 = \sigma_{abs}^2(t = 1/f_{osc}) = \frac{c}{f_{osc}} \quad (7)$$

$$\sigma_{abs}^2(t) = f_{osc} \sigma_c^2 t \quad (8)$$

It describes the magnitude of the period fluctuations but contains no information on the long-term dynamics due to $1/f$ noise. If $1/f$ noise modulates the noise, the period will vary slowly and this form of jitter will not display it. See section 4 for more discussion of $1/f$ noise and jitter.

Herzel [3] defines another type of jitter as cycle-to-cycle jitter, in contrast to everyone else’s use of this term for the jitter σ_c defined above. Herzel’s cycle-to-cycle jitter measures the variance between successive periods. This is a measurement of the jitter between successive periods:

$$\sigma_{cc}^2 = \lim_{N \rightarrow \infty} \left(\frac{1}{N} \sum_{n=1}^N (\tau_{n+1} - \tau_n)^2 \right) = 2\sigma_c^2.$$

3 Equating Phase Noise to Jitter

In the absence of $1/f$ noise in a region where the phase noise displays a -20 dBc/Hz slope, the rms cycle jitter can be related to the phase noise by:

$$\mathcal{L}(f) = \frac{\sigma_c^2 f_{osc}^3}{f^2} \quad (9)$$

$$\sigma_c^2 = \frac{f^2 \mathcal{L}(f)}{f_{osc}^3} \quad (10)$$

Example: A 141 MHz oscillator has a phase noise of -56.75 dBc/Hz at a 1 kHz offset frequency. This corresponds to a cycle-to-cycle jitter of 0.866 ps.

4 Colored Noise Sources

The previous discussions on phase noise and jitter were derived assuming there were no colored noise sources in the oscillator, such as $1/f$ noise or burst noise. The situation changes when $1/f$ noise is added to an oscillator.

4.1 Phase Noise

Phase noise no longer displays a Lorentzian spectrum when $1/f$ noise is present. There is no closed-form expression for the phase noise spectrum in the presence of $1/f$ noise. The discussions so far have concentrated on the case where the transistor models do not have any flicker noise. The analytical models of [1, 2, 3] and the Lorentzian spectrum were derived in the absence of flicker noise. But any physical transistor exhibits flicker noise, and this contributes to an increase in oscillator phase noise at small offset frequencies. Flicker noise is several orders of magnitude worse for MOSFETs than for BJTs. A BJT will typically display a flicker noise corner frequency around 1 kHz, while in a MOSFET it will be around 1 MHz.

Only in the last few years have analytical models for phase noise with flicker noise been proposed [5–8]. Herzel [5] decomposes the model into a Lorentzian for the white noise sources and Gaussian for the flicker noise source. The final spectrum is then a convolution of a Lorentzian with a Gaussian spectrum. Using Herzel's notation:

$$S_{v_L, v_L} = \frac{S_{v_N, v_N}}{4} \frac{(\Delta\omega)_{PR}^2}{\gamma} \pi \int_{-\infty}^{\infty} d\omega' G[\sigma, \omega'] L[\gamma, \omega - \omega'] \quad (11)$$

where

$$G[\sigma, \omega] = \frac{1}{\sqrt{2\pi} \sigma} \exp\left[-\frac{\omega^2}{2\sigma^2}\right] \quad (Gaussian) \quad (12)$$

$$L[\gamma, \omega] = \frac{1}{\pi} \cdot \frac{\gamma}{\gamma^2 + \omega^2} \quad (Lorentzian) \quad (13)$$

This spectrum is called a Voigt line profile, for which there is no analytical expression. It can only be analyzed numerically. The numerical analysis of this integral has not yet been implemented in ADS. It shares the property of the Lorentzian spectrum in that it has an

integrated area of one: it conserves the overall power of the noiseless oscillator, and has a finite value as the offset frequency approaches zero. At small offsets the spectrum looks like a Gaussian when dominated by flicker noise; at larger offsets $1/f^3$ behavior is seen, followed by $1/f^2$ behavior.

Klimovitch's [6, 7] mathematics is not as detailed as Herzel's, but he shows the derivation of the oscillator spectrum in the presence of flicker noise. He, too, obtains a Gaussian spectrum at small offsets, but does not derive an expression for the full spectrum. The approach is not documented enough to implement in a simulator at this point.

Demir [8] also considers the spectrum due to flicker noise. He first mathematically redefines $1/f$ noise so it does not become infinite at $f = 0$, developing a stationary stochastic model for a process which is really nonstationary. His mathematics are more complete but harder to follow; (75) in his paper gives a spectrum which is composed of a Lorentzian convolved with another complex spectrum. He derives approximations at $f = 0$ and $f \gg 0$, but does not consider the transition region between the Gaussian and Lorentzian spectra.

These new approaches [5–8] present a potential model for solving the general problem of phase noise greater than 0 dBc/Hz when flicker noise sources are present. Herzel's model [5] is most amenable to inclusion in ADS, but further research needs to be done. Until this new model gets implemented in ADS, the existing pnfm results can continue to be used at offsets where the phase noise is less than 0 dBc/Hz. Problems with phase noise greater than 0 dBc/Hz occur only in those oscillators that are inherently very noisy, such as ring oscillators.

4.2 Jitter

When $1/f$ noise is present, this lack of correlation between successive samples is no longer true. "Low-frequency noise sources, such as $1/f$ noise, can also result in a correlation between induced jitter on transitions over multiple cycles. In this case, the standard deviations rather than the variances add. Therefore, the standard deviation of the jitter after Δt seconds is proportional to Δt " [2].

One way of thinking of phase noise is to think of random noise sources at multiple frequencies that are modulating the frequency of the oscillator, as if it was a voltage-controlled oscillator. This modulation gives rise to sidebands which are viewed as phase noise in the frequency domain. Consider a $1/f$ noise event occurring at a some low frequency f_1 . It will last for a time $t_1 \propto 1/f_1$. During one time interval t_i to $t_i + t_1$, the noise event takes on a random value r_1 and causes the oscillator period to change to $\tau + \delta\tau_1$. During another time interval t_j to $t_j + t_1$, the noise event takes on a random value r_2 and causes the oscillator period to change to $\tau + \delta\tau_2$. Both of these oscillator periods are different than τ . If we measure the period statistics only between t_i and $t_i + t_1$, we will get a different mean period but the same standard deviation than if we measure it between t_j and $t_j + t_1$. Only if we measure the period statistics for an interval greater than t_1 will variations in the period from the $1/f$ noise source be seen.


This jitter accumulates over time in a free-running oscillator because "any uncertainty in an earlier transition affects all the following transitions, and its effect persists indefinitely" [2]. The sources of jitter are normally assumed to be uncorrelated, both between devices and between successive observations of each oscillator period. The variances (σ^2) add for uncorrelated random variables, but the standard deviations (σ) add for correlated random variables.

The absolute jitter observed for short periods of time less than the time associated with the $1/f$ noise processes has the form ct but the jitter observed for a time period longer than the time associated with the $1/f$ noise processes has the form κt^2 :

$$\sigma_{abs}^2(t) = ct + \kappa t^2 \quad (14)$$

where κ is another noise constant associated with the $1/f$ process in the oscillator. “In practice, both correlated and uncorrelated sources exist in a circuit, and hence a log-log plot of the timing jitter $\sigma_{abs}(t)$ versus the measurement delay t for an open-loop oscillator will demonstrate regions with slopes of $1/2$ and 1 ” [2].

Hajimiri [2] measured a CMOS ring oscillator that displayed $1/f$ noise. The 2.81 GHz oscillator can be characterized by $c = 3.819 \times 10^{-17}$ and $\kappa = 6.250 \times 10^{-10}$. Phase noise of -95.2 dBc/Hz was measured at a 1 MHz offset. The $1/f$ noise corner frequency was not measured but should be less than 1 MHz. The cycle-to-cycle jitter σ_c is 0.117 ps, compared to an oscillator period of 356 ps. The absolute jitter as a function of measurement time is shown to the right. For small measurement times the jitter is proportional to the square root of the measurement time, while for long measurement times the jitter is proportional to the measurement time.

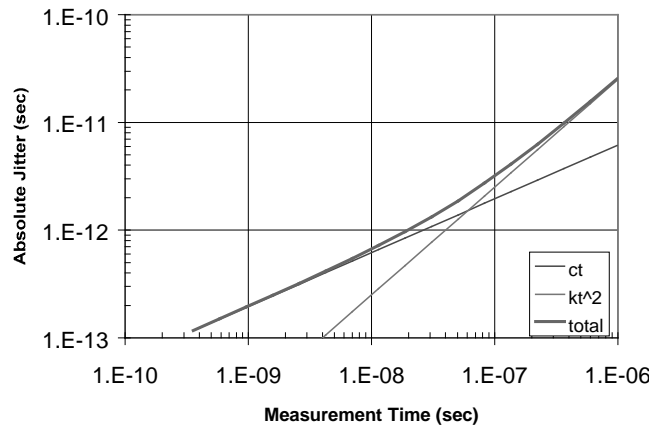

Ignoring $1/f$ noise gives reasonable results when the jitter measurement time is less the reciprocal of the $1/f$ noise corner frequency.

4.3 Equating Phase Noise to Jitter

There are three different equations that have been published in the literature for computing absolute jitter from an arbitrary phase noise response.

Demir [8] gives (15) where $S_{\phi,f}(f)$ is the spectral density of phase fluctuations due only to the flicker noise sources:

$$\sigma_{abs}^2(t) = ct + \int_{-\infty}^{\infty} S_{\phi,f}(f) \frac{1 - \exp(j2\pi ft)}{4\pi^2 f^2} df \quad (15)$$

Zanchi [4]:

$$\sigma_{abs}^2(t) = \frac{1}{f_{osc}^4} \int_{-\infty}^{\infty} f^2 S_{\phi}(f) \left| \frac{\sin(\pi f / f_{osc})}{\pi f / f_{osc}} \right|^2 df \quad (16)$$

Hajimiri [2]:

$$\sigma_{abs}^2(t) = 4 \int_{-\infty}^{\infty} S_{\phi}(f) \sin^2(\pi ft) df \quad (17)$$

These are three different equations for computing absolute jitter from an arbitrary phase noise response. To the author's knowledge, no one has compared or validated any of them.

References

- [1] A. Demir, A. Mehrotra and J. Roychowdhury, "Phase Noise in Oscillators: A Unifying Theory and Numerical Methods for Characterization", *IEEE Transactions on Circuits and Systems-II*, vol. 47, pp. 655–674, May 2000.
- [2] A. Hajimiri, S. Limotyrakis and T. H. Lee, "Jitter and Phase Noise in Ring Oscillators", *IEEE Journal of Solid-State Circuits*, vol. 34, pp. 790–804, June 1999.
- [3] F. Herzel and B. Razavi, "A Study of Oscillator Jitter Due to Supply and Substrate Noise", *IEEE Transactions on Circuits and Systems-II*, vol. 46, pp. 56–62, Jan. 1999.
- [4] A. Zanchi, A. Bonfanti, S. Levantino and C. Samori, "General SSCR vs. Cycle-to-Cycle Jitter Relationship with Application to the Phase Noise in PLL", *Proc. of 2001 Southwest Symposium on Mixed Signal Design*, pp. 32–37.
- [5] F. Herzel, "An Analytical Model for the Power Spectral Density of a Voltage-Controlled Oscillator and Its Analogy to the Laser Linewidth Theory", *IEEE Transactions on Circuits and Systems – I: Fundamental Theory and Applications*, vol. 45, pp. 904–908, Sept. 1998.
- [6] G. V. Klimovitch, "Near-Carrier Oscillator Spectrum Due to Flicker and White Noise", *Proc. of ISCAS 2000, IEEE International Symposium on Circuits and Systems*, Geneva, pp. I-703–706, 2000.
- [7] G. V. Klimovitch, "A Nonlinear Theory of Near-Carrier Phase Noise in Free-Running Oscillators", *Proc. of Third IEEE International Conference on Circuits and Systems*, Caracas, pp T80/1–6, 2000.
- [8] A. Demir, "Phase Noise in Oscillators: DAEs and Colored Noise Sources", *Proc. of ICCAD-98*, pp. 170–177, 1998.
- [9] J. A. McNeill, "Jitter in Ring Oscillators", *IEEE Journal of Solid-State Circuits*, vol. 32, pp. 870–879, June 1997.
- [10] P. Heydari and M. Pedram, "Analysis of Jitter Due to Power-Supply Noise in Phase-Locked Loops", *Proc. of IEEE Custom Integrated Circuits Conference 2000*, pp. 443–446.

射频和天线设计培训课程推荐

易迪拓培训(www.edatop.com)由数名来自于研发第一线的资深工程师发起成立,致力并专注于微波、射频、天线设计研发人才的培养;我们于 2006 年整合合并微波 EDA 网(www.mweda.com),现已发展成为国内最大的微波射频和天线设计人才培养基地,成功推出多套微波射频以及天线设计经典培训课程和 ADS、HFSS 等专业软件使用培训课程,广受客户好评;并先后与人民邮电出版社、电子工业出版社合作出版了多本专业图书,帮助数万名工程师提升了专业技术能力。客户遍布中兴通讯、研通高频、埃威航电、国人通信等多家国内知名公司,以及台湾工业技术研究院、永业科技、全一电子等多家台湾地区企业。

易迪拓培训课程列表: <http://www.edatop.com/peixun/rfe/129.html>



射频工程师养成培训课程套装

该套装精选了射频专业基础培训课程、射频仿真设计培训课程和射频电路测量培训课程三个类别共 30 门视频培训课程和 3 本图书教材;旨在引领学员全面学习一个射频工程师需要熟悉、理解和掌握的专业知识和研发设计能力。通过套装的学习,能够让学员完全达到和胜任一个合格的射频工程师的要求...

课程网址: <http://www.edatop.com/peixun/rfe/110.html>

ADS 学习培训课程套装

该套装是迄今国内最全面、最权威的 ADS 培训教程,共包含 10 门 ADS 学习培训课程。课程是由具有多年 ADS 使用经验的微波射频与通信系统设计领域资深专家讲解,并多结合设计实例,由浅入深、详细而又全面地讲解了 ADS 在微波射频电路设计、通信系统设计和电磁仿真设计方面的内容。能让您在最短的时间内学会使用 ADS,迅速提升个人技术能力,把 ADS 真正应用到实际研发工作中去,成为 ADS 设计专家...



课程网址: <http://www.edatop.com/peixun/ads/13.html>



HFSS 学习培训课程套装

该套课程套装包含了本站全部 HFSS 培训课程,是迄今国内最全面、最专业的 HFSS 培训教程套装,可以帮助您从零开始,全面深入学习 HFSS 的各项功能和在多个方面的工程应用。购买套装,更可超值赠送 3 个月免费学习答疑,随时解答您学习过程中遇到的棘手问题,让您的 HFSS 学习更加轻松顺畅...

课程网址: <http://www.edatop.com/peixun/hfss/11.html>

CST 学习培训课程套装

该培训套装由易迪拓培训联合微波 EDA 网共同推出,是最全面、系统、专业的 CST 微波工作室培训课程套装,所有课程都由经验丰富的专家授课,视频教学,可以帮助您从零开始,全面系统地学习 CST 微波工作的各项功能及其在微波射频、天线设计等领域的设计应用。且购买该套装,还可超值赠送 3 个月免费学习答疑...

课程网址: <http://www.edatop.com/peixun/cst/24.html>



HFSS 天线设计培训课程套装

套装包含 6 门视频课程和 1 本图书,课程从基础讲起,内容由浅入深,理论介绍和实际操作讲解相结合,全面系统的讲解了 HFSS 天线设计的全过程。是国内最全面、最专业的 HFSS 天线设计课程,可以帮助您快速学习掌握如何使用 HFSS 设计天线,让天线设计不再难...

课程网址: <http://www.edatop.com/peixun/hfss/122.html>

13.56MHz NFC/RFID 线圈天线设计培训课程套装

套装包含 4 门视频培训课程,培训将 13.56MHz 线圈天线设计原理和仿真设计实践相结合,全面系统地讲解了 13.56MHz 线圈天线的工作原理、设计方法、设计考量以及使用 HFSS 和 CST 仿真分析线圈天线的具体操作,同时还介绍了 13.56MHz 线圈天线匹配电路的设计和调试。通过该套课程的学习,可以帮助您快速学习掌握 13.56MHz 线圈天线及其匹配电路的原理、设计和调试...

详情浏览: <http://www.edatop.com/peixun/antenna/116.html>



我们的课程优势:

- ※ 成立于 2004 年,10 多年丰富的行业经验,
- ※ 一直致力并专注于微波射频和天线设计工程师的培养,更了解该行业对人才的要求
- ※ 经验丰富的一线资深工程师讲授,结合实际工程案例,直观、实用、易学

联系我们:

- ※ 易迪拓培训官网: <http://www.edatop.com>
- ※ 微波 EDA 网: <http://www.mweda.com>
- ※ 官方淘宝店: <http://shop36920890.taobao.com>